



How-to start PowerBox 6pro Ncore


- 1) Switch on power switch (right bottom side below panel)
- 2) Toggle L or R til you see "volume" displayed
Select volume with up or down buttons to -25 dB
- 3) Plug in a music source in one of the PowerBoxes rear inputs
Toggle L or R til you see "Input:"
Toggle to connected input with up or down button.
"Auto Detect" switches automatically to a sensed digital (!!) input
- 4) Initially , don´t change anything in "SETUP DLCP "

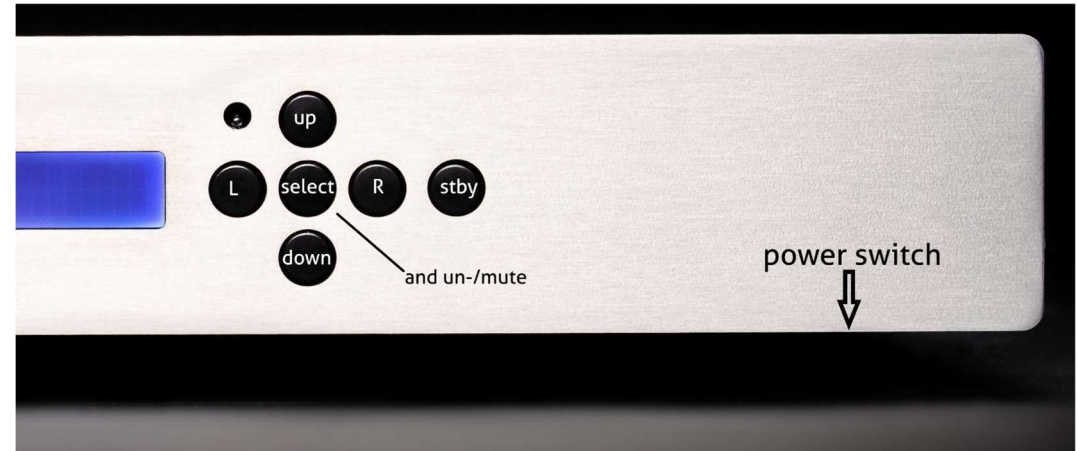

Use Remote control for

- Stby ON/OFF (= red button).
- Volume control (+ / - buttons)
Display must show "volume" in order to control volume via remote.
Attention: inadvertent pressing of < or > (input selection) may switch to an input without music connected -> silence!
- Un-/mute with 

Changes in CONTROL Firmware 1.6beta

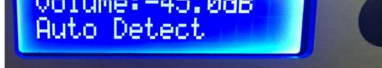- The **volume** display is an improved combo display , showing volume and selected input together.
- 
- DLCP1-6 channel routing is no longer changeable via push-buttons, but only with connected HFD software. This eliminates the risk of inadvertent changes, that could affect sound and could lead to driver overload.
 - No PC-commanded change into "Bootloader Mode" anymore! Bootloader Mode (for future firmware loads) from now on can only be entered by pressing **up&down** push-buttons simultaneously during mains power-up.